

Lab 005: the Operational Amplifier

Jonas Sjöberg (Högskolan i Gävle)
Esther Hedlund (Högskolan i Gävle)

Contents

| | | |
|----------|-----------------------------------|----------|
| 1 | Inverting DC Amplifier | 2 |
| 1.1 | Theory | 2 |
| 1.2 | Measurements | 3 |
| 2 | Inverting AC Amplifier | 4 |
| 2.1 | Oscilloscope shots | 4 |
| 2.2 | Measurements | 4 |
| 3 | Non-inverting DC Amplifier | 4 |
| 3.1 | Measurements | 4 |
| 4 | Non-inverting AC Amplifier | 5 |
| 4.1 | Measurements | 5 |
| 5 | Active full wave rectifier | 5 |

1 Inverting DC Amplifier

1.1 Theory

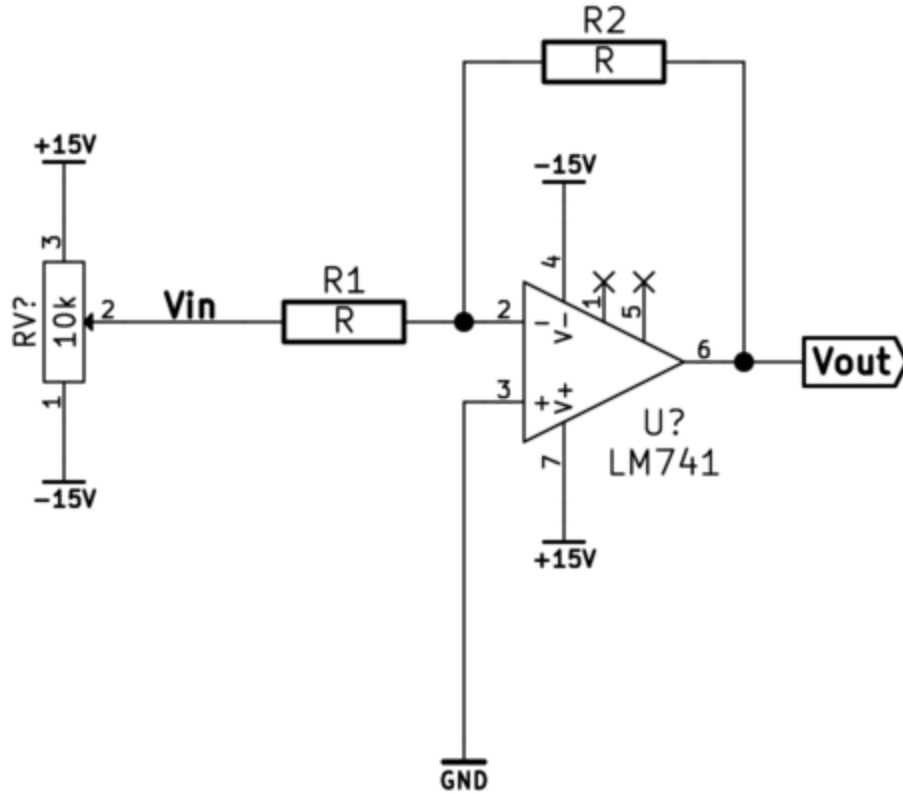


Figure 1: Inverting DC amplifier

Gain, A_v , can be expressed as a ratio of the feedback impedance to the input impedance. A fraction of the output is fed back, causing the op amp to compensate and in effect amplify.

$$A_v = \frac{R_2}{R_1} \quad (1)$$

The circuit gain for ideal components is therefore;

For $R_2 = 100k\Omega$:

$$A_v = \frac{V_{out}}{V_{in}} = -\frac{R_2}{R_1} \quad (2)$$

$$= \frac{100k\Omega}{10k\Omega} = 10 \quad (3)$$

$$= 20 \times \log \frac{10}{1} = 20dB \quad (4)$$

For $R_2 = 10k\Omega$:

$$A_v = \frac{V_{out}}{V_{in}} = -\frac{R_2}{R_1} \quad (5)$$

$$= \frac{10k\Omega}{10k\Omega} = 1 \quad (6)$$

$$= 20 \times \log \frac{1}{1} = 0dB \quad (7)$$

In both cases, the signal phase is inverted 180°.

1.2 Measurements

| Uin (V) | Uout(V) | Av(x) |
|---------|---------|--------|
| -0.105 | +1.087 | -10.54 |
| -1.008 | +10.236 | -10.15 |
| +1.004 | -10.104 | -10.06 |

Table 1: $R_2 = 100k\Omega$

| Uin (V) | Uout(V) | Av(x) |
|---------|---------|-------|
| -0.1051 | +0.1051 | -1 |
| -1.008 | +1.008 | -1 |
| +1.004 | -1.004 | -1 |

Table 2: $R_2 = 10k\Omega$

2 Inverting AC Amplifier

2.1 Oscilloscope shots

2.2 Measurements

Measured amplification = — Measured phase = 180 Theoretical amplifier =
Theoretical phase =

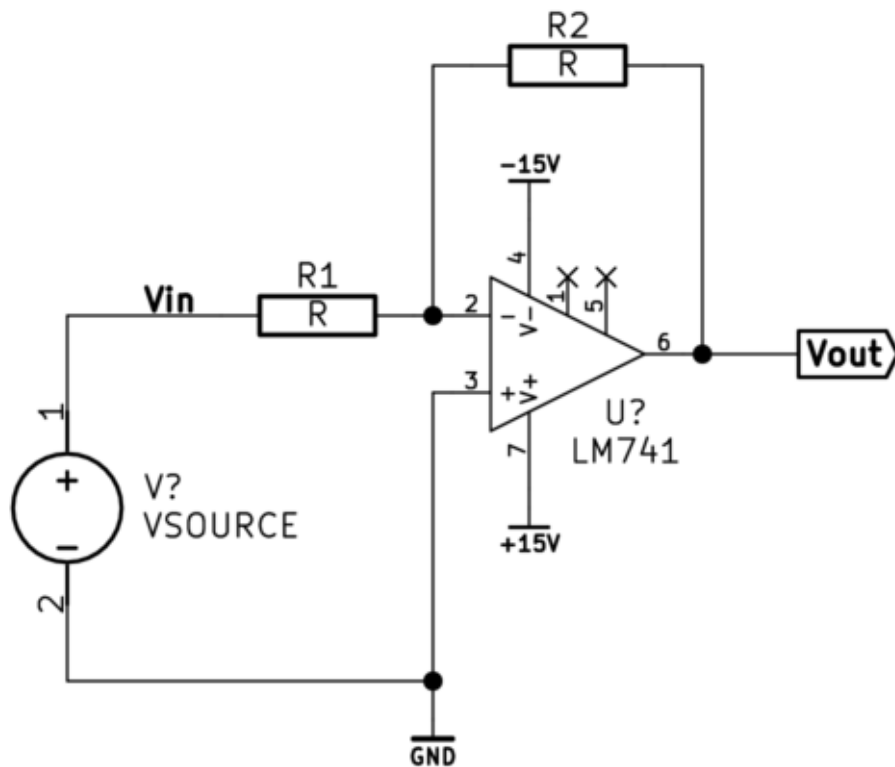


Figure 2: Inverting AC amplifier

3 Non-inverting DC Amplifier

$$A_v = 1 + R_2/R_1$$

3.1 Measurements

| U _{in} (V) | U _{out} (V) | A _v (ggr) |
|---------------------|----------------------|----------------------|
| +0.1007 | +0.2164 2 | .15 |
| +1.002 | +2.048 2 | .04 |
| -1.005 | -2.03 2 | .019 |

Table 3: R2 = 10k Ω

| U _{in} (V) | U _{out} (V) | A _v (ggr) |
|---------------------|----------------------|----------------------|
| +0.1009 | +1.178 | 11.67 |
| +1.1013 | +11.3 | 11.15 |
| -1.004 | -11.09 | 11.05 |

Table 4: R2 = 100k Ω

4 Non-inverting AC Amplifier

4.1 Measurements

Input signal amplitude =

Output signal amplitude =

Measured amplification =

Measured phase =

Theoretical amplification = Theoretical phase =

5 Active full wave rectifier

Active rectifier does not suffer from the “deadzone” when the signal is too small to turn on the rectifying diode. The op amp compensates for the diode forward voltage drop. The circuit output is a full wave rectified version of the signal, with a frequency limit mostly set by the op amp bandwidth. Diode D2 prevents the op amp from hitting the rail hard when D1 is reverse biased. This makes the recovery and rise time faster when D1 biases on. This improves circuit response times.

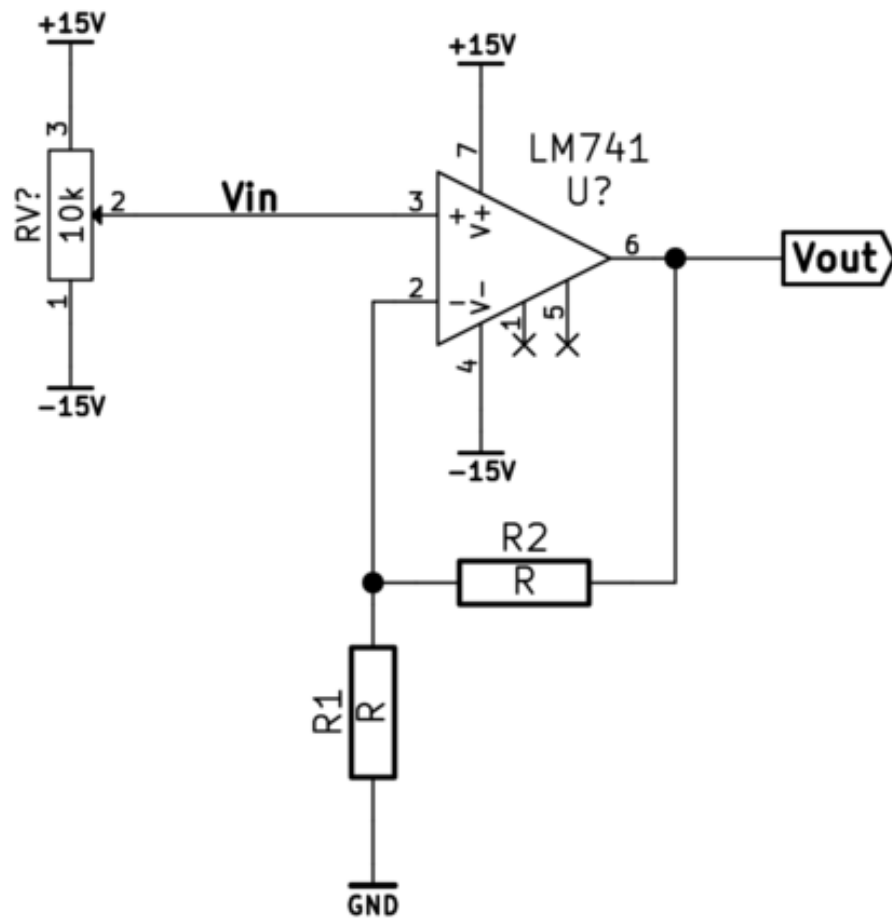


Figure 3: Non-inverting DC amplifier

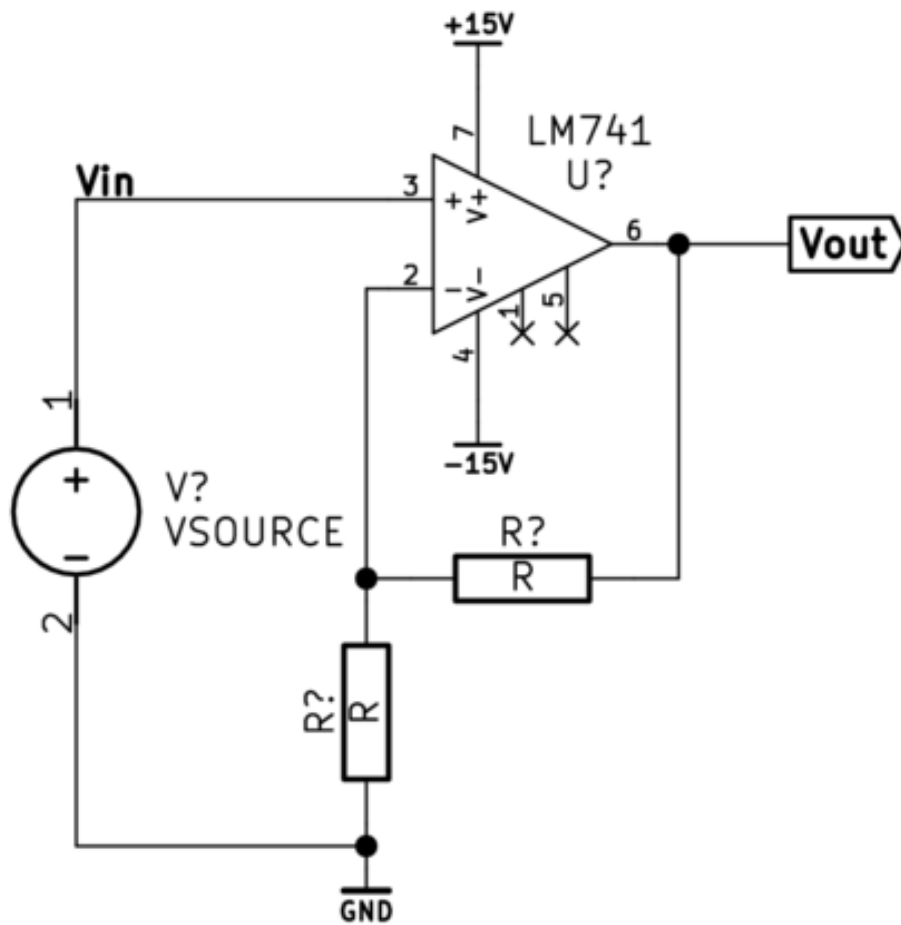


Figure 4: Non-inverting AC amplifier

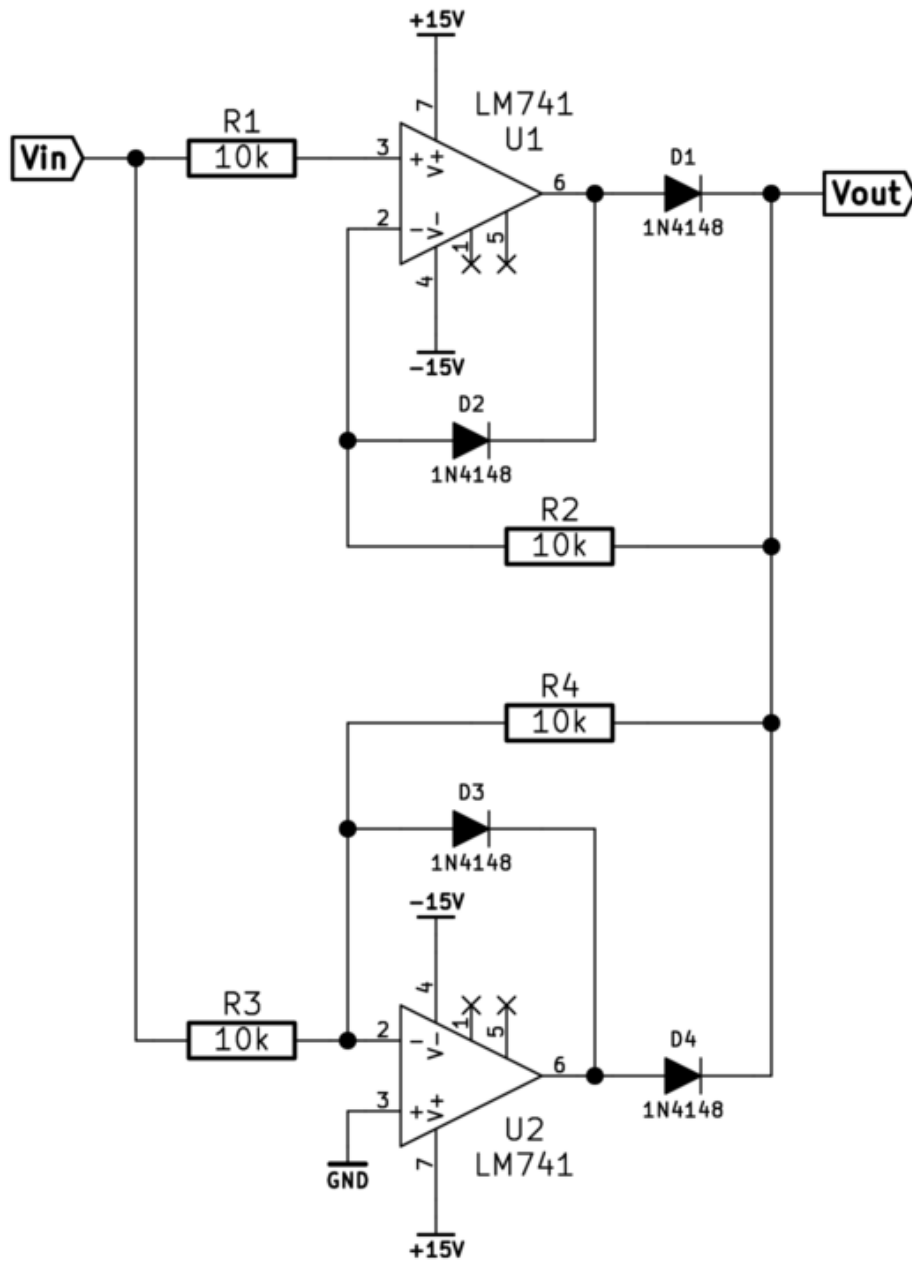


Figure 5: Active full wave rectifier